



# MINDER Dual Activated Door Handle Alarm



## Description

---

The MINDER Dual Activated Door Handle Alarm is suitable for any door knob or handle and is supplied with a rubber secure ring to keep it in place. It features a 110dB alarm siren which sounds when activated by either the touch or vibration sensors, and can also be set to chime mode. In chime mode, the chime will sound twice once activated, and in alarm mode, it will sound continuously for 60 seconds unless disarmed, and will rearm itself after 6 seconds. It is suitable for use with both metal and wooden doors and comes supplied with 3 x AAA batteries.

## Features

---

- Batteries included
- Suitable for any door knob or handle
- Supplied with rubber secure ring
- Easy access button to adjust sensitivity and alarm/chime mode
- 110dB alarm siren
- Alarm activated by both vibration and touch

## Product Table

---



**L31355**

White