



# MINDER Mini Window & Door Alarm



## Description

---

The MINDER Mini Window & Door Alarm is suitable for both windows and doors and features a 110dB alarm siren which sounds when the window or door is opened and will sound continuously until the alarm is disarmed or the door or window is closed. It has an easy access button on the side which enables the user to arm and disarm the alarm at their convenience, plus a chime setting which will sound a chime each time the window or door is opened and closed. The alarm also has a low battery test button and is supplied with 4 x LR44 button batteries included.

## Features

---

- Batteries included
- Low battery test button
- Easy access off/alarm/chime switch
- 110dB alarm siren
- Alarm sounds when window or door is opened

## Product Table

---



**L31353**

White