



Description

Readers and keypads are pre-wired with 5m of cable. If this needs extending then CR9540 reader cable must be used. The maximum cable length from reader to control unit is 100m. When using reader cable over distances in excess of 25m the 12V and 0V cores should be doubled up to minimise voltage drop.

Features

- CR9540 Specification
- Reader and keypads extend up to 100m
- Suitable for internal use
- Overall screened 10-core cable

Product Table

	L9896 166-010 - 10m
	L9897 166-025 - 25m
	L18062 166-100 - 100m